

	Base	Full	Professional
<b>HYDROcom explorer</b>	✓	✓	✓
Selection "All folders"/"current folder"	✓	✓	✓
Delete measuring series	✓	✓	✓
search functions	✗	✗	✓
details /statistics	✓	✓	✓
print / copy	✓	✓	✓
group view	✓	✓	✓
<b>Menu file</b>	✓	✓	✓
New	✗	✓	✓
open	✓	✓	✓
save	✗	✓	✓
last presentations	✓	✓	✓
<b>Viewer</b>	✓	✓	✓
Select / edit layout	✗	✓	✓
No. Of layout sections	1	6	24
Line diagram	✓	✓	✓
No. Of channels	12	12	24
format	✗	✓	✓
save / print / copy	✓	✓	✓
add / delete elements	✗	✓	✓
zoom function	✓	✓	✓
spot lines	✗	✓	✓
difference measuring lines	✗	✗	✓
smooth	✗	✓	✓
move	✗	✓	✓
copy & past	✓	✓	✓
Histogram	✗	✓	✓
No. Of bars	-	4	8
Format	✗	✓	✓
save / print / copy	✗	✓	✓
add / delete elements	✗	✓	✓
Classification	✗	✗	✓
Table	✗	✓	✓
No. Of columns	✗	13	25
format / print / copy	✗	✓	✓
filtering / statistics / spot values	✗	✓	✓
compact table	✗	✓	✓
Text	✗	✓	✓
format / print / copy	✗	✓	✓
statistics	✗	✓	✓
Picture	✗	✓	✓
file selection	✗	✓	✓
format / print / copy	✗	✓	✓
statistics	✗	✓	✓
expand	✗	✓	✓
Undo / redo / delete / clear	✓	✓	✓
configuration files	✗	✓	✓
for line diagrams	✗	✓	✓
for tables	✗	✓	✓
<b>Measuring instrument functions</b>	✓	✓	✓
Connect / disconnect / connection options	✓	✓	✓
read memory / transfer measuring data	✓	✓	✓
Online mode	✓	✓	✓
digital display	✓	✓	✓
analoge display (gauge meter)	✗	✗	✓
bargraph display	✗	✗	✓
minimized application (plus transparency mode)	✗	✗	✓
RS 458 configuration	✓	✓	✓
Linearisation	✓	✓	✓
Device informationen	✗	✓	✓
Device list	✗	✓	✓
<b>Extras</b>	✓	✓	✓
data exchange	✗	✓	✓
txt-format import /export	✗	✓	✓
xml-format import / export	✗	✓	✓
csv-format export	✗	✓	✓
operation language / folder selection	✓	✓	✓
<b>Report</b>	✗	✗	✓